



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Cass		Fav / Marker / PC
	Timer		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Select		OK
	Clear		Exit / Cancel / Clear
	Up		Up
	Down		Down

Originalfernbedienung    Ersatzfernbedienung

	Record		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Previous		I<< / Preset-
	Stop		Stop / Hold
	Next		>>I / Preset+
	Store		Smart / List
	ATS		Setup / OPT /
	Tracking		Display / Media
	SP/LP		AV / Input / RDS

