 





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Mute		Mute / Dimmer
	Play / Play		Play / Slow
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Preset -		l<< / Preset-
	Vid 3 / CBL/SAT		Eject / Surround
	Tun-M. / Hold		Picture / Format
	Mem. / Size		Zoom / Size
	Night		Sleep / Timer
	AM / FM		TV/Radio /
	Set		Setup / OPT /
	[≡]		Text / Goto
	Input		AV / Input / RDS
	Menu / SPKR.		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Right		Right
	Delay / Normal		Exit / Cancel / Clear
	Down		Down
	RDS / D.Skip		Back / Return
	Vol +		Vol+
	Digital / [≡X]		Smart / List
	PR + / Sleep		CH+ / Page+
	Vol -		Vol-
	OSD		Display / Media
	PR - / Surr.		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	CH. / [= ?]		Guide / EPG / -/--
	0		0
	Red / Tuning +		Red / Netflix / Search
	Green / Direct		Green / APP / Repeat
	Yellow / Clear		Yellow / YouTube / Repeat
	Blue / Preset +		Blue / Prime Video / Random
	Power Off		Shift + Power
	Vid 2 / TV		Shift + TV/Radio / Program
	Test		Shift + Text /
	Tuning -		Shift + Left
	PR + / Sleep		Shift + CH + /
	Vid 1 / VCR		Shift + 1
	DVD		Shift + 2

Originalfernbedienung Ersatzfernbedienung

	CD		Shift + 3
	Vid. 4		Shift + 4
	Tape		Shift + 5
	6 CH.		Shift + 6
	Red / Tuning +		Shift + Red / Netflix /
	Blue / Preset +		Shift + Blue / Prime

