 





 


 


 


 
 
 
 

 


 
 
 

 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Mute		Mute
	DVD		Shift + 2
	CD		Shift + 3
	Tape		Shift + 4
	Vid 1 / VCR		Shift + 5
	Vid 2 / TV		Shift + 6
	Vid 3 / CBL/SAT		Shift + 7
	Vid. 4		Shift + 8
	DIM		Guide
	AM / FM		Shift + 9
	6/8 CH.		Shift + 0
	PR + / Sleep		Ch +
	PR - / Surr.		Ch -
	Test		Smart
	Night		Media

Originalfernbedienung Ersatzfernbedienung

	Input		AV
	Vol +		Vol +
	Vol -		Vol -
	CH. / [=?]		Shift + Guide
	Menu / SPKR.		Menu
	Up		Up
	Left		Left
	Set		Ok
	Right		Right
	Down		Down
	Digital / [=X]		Exit
	Delay / Normal		Back
	1		1
	2		2
	3		3
	4		4
	5		5



 

 

 

 
 
 
 
 
 
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M. / Hold		TV/R
	Mem. / Size		3D
	Red / Tuning +		Red
	Red / Tuning +		Shift + Up
	Tuning -		Shift + Down
	Green / Direct		Green
	OSD		Options
	Yellow / Clear		Yellow
	RDS / D.Skip		Text
	Blue / Preset +		Blue
	Blue / Preset +		Shift + Right
	Preset -		Shift + Left

Originalfernbedienung Ersatzfernbedienung

	Dolby		Shift + Red
	Logic 7		Shift + Blue
	DTS Neo 6		Shift + Yellow
	DTS Surr.		Shift + Green
	Stereo		Dual
	<<		<<
	Play / Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop

