


 



 



 













 

 

 







 

 











 

 

 

 
 
 





 






**Originalfernbedienung    Ersatzfernbedienung**

	System Off		Power
	TV		Shift + 1
	Disc		Shift + 2
	Radio		Shift + 3
	AUX		Shift + 4
	Video		Shift + 5
	D-IN		Shift + 6
	USB1		Shift + 7
	USB 2		Shift + 8
	PC		Shift + 9
	Presets + / Pic +		Ch +
	Presets - / Pic -		Ch -
	Info		Info
	Mute		Mute
	Subtitle		Subt
	Audio		Dual
	Volume +		Vol +

**Originalfernbedienung    Ersatzfernbedienung**

	Volume -		Vol -
	Set-Up Menu		Menu
	Disc Menu / Teletext		D. Menu
	Disc Menu / Teletext		Text
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Status / Mix		Smart
	OSD		Media
	Red / Playlist		Red
	Green / Random		Green
	Yellow / Repeat		Yellow
	Blue / Angle		Blue
	Yellow / Repeat		Shift + Text
	Red / Playlist		List














**Originalfernbedienung   Ersatzfernbedienung**

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Zoom		Shift + Eject
	A-B		Shift + Play
	Screen Format		Format
	Open		Eject
	I<< Previous/Step		I<<
	>>I Next/Step		>>I

**Originalfernbedienung   Ersatzfernbedienung**

	<< Search/Slow		<<
	>> Search/Slow		>>
	Play		Play
	Title		Shift + Info
	Stop		Stop
	Pause / Freeze		Pause

