



Originalfernbedienung Ersatzfernbedienung

	Power ON		Power
	Power OFF		Shift + Power
	DVD		Shift + 1
	CD		Shift + 2
	TAPE		Shift + 3
	VID 1		Shift + 4
	VID 2		Shift + 5
	VID 3		Shift + 6
	TV		Shift + 7
	FM / AM		Shift + 8
	<< / Tuning-		<<
	>> / Tuning+		>>
	I<< / Preset-		I<<
	>>I / Preset+		>>I
	Menu		Menu
	Memory		Pre Ch
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol +
	Volume-		Vol -
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	SURR.		Smart
	Digital		Media
	Delay		TV/R
	Test		Text
	Night		3D
	Sleep		Sleep
	Mute		Mute
	RDS		Subt
	1		1
	2		2
	3		3





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

