 






 


 






 

 

 

 
 

 
 
 








**Originalfernbedienung Ersatzfernbedienung**

	On		Power
	Off		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[≡]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right

**Originalfernbedienung Ersatzfernbedienung**

	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Shift + Guide
	Mem/[≡◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow


 
 









**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off	 + 	Shift + Power
	Night	 	Exit
	[≡]	 	Text
	Vol+	 	Vol +
	Vol-	 	Vol -
	SPKR/Menu	 	Menu
	CH./[≡?]	 	TV/R
	Digital/[≡X]	 	Media
	Delay/Normal	 	Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Set		Ok
	1		1
	2		2

**Originalfernbedienung    Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Guide
	Mem/[≡◇]	 	Pre Ch
	Direct	 	Smart
	Clear	 +  	Shift + Exit
	Preset ▲	 	Ch +
	Preset ▼	 	Ch -
	RDS/D.Skip	 	Options
	>>		>>
	<<		<<












**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off	 + 	Shift + Power
	SPKR/Menu		Menu
	Delay/Normal		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Guide
	Mem/[≡◆]		Pre Ch
	Direct		Smart

**Originalfernbedienung    Ersatzfernbedienung**

	Preset ▲/Blue		Ch +
	RDS/D.Skip		Options
	>>		>>
	<<		<<
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	Power (On /Off)		Media
	PR+ VCR	 + 	Shift + Ch +
	PR- VCR		Ch -
	Vol+ VCR		Vol +
	Vol- VCR		Vol -
	Input VCR		AV
	1 VCR	 + 	Shift + 1
	2 VCR	 + 	Shift + 2







