



Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Zone 2		Media
	Mute		Mute
	Cable/SAT		Shift + 1
	STB		Shift + 2
	TV		Shift + 3
	Disc		Shift + 4
	MHL		Shift + 5
	AUX		Shift + 6
	Audio		Shift + 7
	Game		Shift + 8
	AVR		Shift + 9
	USB		Shift + Guide
	Network		Shift + 0
	Radio		Shift + Pre Ch
	Surr Mode		Dual

Originalfernbedienung Ersatzfernbedienung

	OSD Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back/Exit		Back
	Home		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9


 





 

 






Originalfernbedienung    Ersatzfernbedienung

	0		0
	Clear		Exit
	Test		Text
	Vol+		Vol +
	Vol-		Vol -
	Delay		Options
	Info/Option		Info
	Sleep		Sleep
	Dim		List
	CH/Tuner Up		Ch +
	CH/Tuner Down		Ch -
	P-Scan / Top		D. Menu
	Direct		TV/R
	Mem		Rec
	RDS/*		Subt
	I<		I<<
	<<		<<

Originalfernbedienung    Ersatzfernbedienung

	>>		>>
	>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	PrevCH		Pre Ch





**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	Zone 2		Media
	Mute		Mute
	Cable/SAT		Shift + 1
	STB		Shift + 2
	TV		Shift + 3
	Disc		Shift + 4
	MHL		Shift + 5
	AUX		Shift + 6
	Audio		Shift + Dual
	Game		Shift + 8
	AVR		Shift + 9
	USB		Shift + Guide
	Network		Shift + 0
	Radio		Shift + Pre Ch
	Surr MOde		Dual

**Originalfernbedienung    Ersatzfernbedienung**

	OSD Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back/Exit		Back
	Home		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9


 





 

 






Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit
	Test		Text
	Vol+		Vol +
	Vol-		Vol -
	Delay		Options
	Info/Option		Info
	Sleep		Sleep
	DIM		List
	CH/Tuner Up		Ch +
	CH/Tuner Down		Ch -
	P-Scan/Top		D. Menu
	Direct		TV/R
	Mem		Rec
	RDS/*		Subt
	I<		I<<
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	PrevCH		Pre Ch

