



Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off	+	Shift + Power
	Mute		Mute
	AVR	+	Shift + 1
	DVD	+	Shift + 2
	CD	+	Shift + 3
	Tape	+	Shift + 4
	VID1/VCR	+	Shift + 5
	VID2/TV	+	Shift + 6
	VID3/CBL/SAT	+	Shift + 7
	DIM	+	Shift + 8
	AM/FM	+	Shift + 9
	6 CH	+	Shift + Guide
	Sleep		Sleep
	Test		Smart
	Input		AV
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Surr.		Dual
	Night		Exit
	[≡]		Text
	Vol-		Vol -
	CH./[≡?]		TV/R
	Up		Up
	SPKR/Menu		Menu
	Left		Left
	Set		Ok
	Right		Right
	Digital/[≡X]		Media
	Down		Down
	Delay/Normal		Info
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	Tun-M/[≡+]		Guide
	9		9
	0		0
	Mem/[≡◆]		Pre Ch
	Tuning ▲ / Red		Ch +
	Tuning ▲ / Red		Red
	Direct/Green		Green
	Clear/Yellow		Yellow
	Preset ▲ / Blue		Shift + Ch +
	Preset ▲ / Blue		Blue
	Tuning ▼		Ch -
	RDS/D.Skip		Options
	Preset ▼		Shift + Ch -




 





 


 
 

 
 
 




 
 


 
 

 


Originalfernbedienung Ersatzfernbedienung

	Dolby		Shift + Red
	DTS Surr.		Shift + Green
	DTS Neo 6		Shift + Yellow
	Logic 7		Shift + Pre Ch
	Stereo		Shift + Blue
	Skip Dwn DVD		I<<
	Skip Up DVD		>>I
	<< DVD		<<
	Play DVD		Play
	>> DVD		>>
	Stop DVD		Stop
	Pause DVD		Pause



 



 


 

 

 


 





 









**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off	 + 	Shift + Power
	Vol+		Vol +
	Night		Exit
	[≡]		Text
	Vol-		Vol -
	CH./[≡?]		TV/R
	Up		Up
	SPKR/Menu		Menu
	Left		Left
	Set		Ok
	Right		Right
	Digital/[≡X]		Media
	Down		Down
	Delay/Normal		Info
	1		1
	2		2

**Originalfernbedienung    Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Tun-M/[≡+]		Guide
	9		9
	0		0
	Mem/[≡◇]		Pre Ch
	Direct		Smart
	Clear	 + 	Shift + Exit
	Preset ▲		Ch +
	RDS/D.Skip		Options
	Preset ▼		Ch -
	I<<		I<<
	>>I		>>I







