



**Originalfernbedienung    Ersatzfernbedienung**

	Display		Display / Media
	Input Setup		Setup / OPT /
	Speaker Setup		Menu / Home
	Level Settings		Back / Return
	Enter		OK
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	EQ Preset		Subtitle / EQ
	System Off 1		1
	System Off 2		2
	System Off 3		3
	System Off 4		4




 


 










 



















**Originalfernbedienung    Ersatzfernbedienung**

	System Off 5		5
	Device On AMP/PROC/Phono/		Power
	Device Off AMP		Shift + Power
	System On PROC		6
	System ON Phono		7
	System On TV 2		8
	System On Tape		9
	System On Tape		0
	System On AUX		Smart / List
	System ON CDR		Shift + Display / Media
	System ON CDR		Shift + Smart / List





**Originalfernbedienung    Ersatzfernbedienung**

	Device On 1	 + 	Shift + 1
	Device On 2	 + 	Shift + 2
	Device On 3	 + 	Shift + 3
	Device Off		Power
	Info/RDS		Info / Angle
	Time		Sleep / Timer
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Clear		Exit / Cancel / Clear
	Check		Picture / Format
	Prog		TV/Radio /
	Input Setup		Setup / OPT /
	Level Settings		Back / Return
	Enter		OK
	EQ Preset		Subtitle / EQ
	Speaker Setup		Menu / Home
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Volume+		Vol+
	Volume-		Vol-
	Pause		Pause / Step / Freeze
	Mute		Mute / Dimmer
	<<		<< / Tune-









Originalfernbedienung    Ersatzfernbedienung

	Device On 1	+ <b>1</b>	Shift + 1
	Device On 2	+ <b>2</b>	Shift + 2
	Device On 3	+ <b>3</b>	Shift + 3
	Device Off		Power
	Info/RDS	<b>INFO</b>	Info / Angle
	Display		Display / Media
	1	<b>1</b>	1
	2	<b>2</b>	2
	3	<b>3</b>	3
	4	<b>4</b>	4
	5	<b>5</b>	5
	6	<b>6</b>	6
	7	<b>7</b>	7
	8	<b>8</b>	8
	9	<b>9</b>	9
	0	<b>0</b>	0
	Band		TV/Radio /

Originalfernbedienung    Ersatzfernbedienung

	FM Mode		Zoom / Size
	Auto		Red / Netflix / Search
	Mem		Blue / Prime Video / Random
	Clear		Exit / Cancel / Clear
	Volume+		Vol+
	Volume-		Vol-
	Scroll+		CH+ / Page+
	Scroll-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Mute		Mute / Dimmer
	Speaker Setup		Menu / Home
	Select		Text / Goto
	Input Setup		Setup / OPT /



Program

Tools



