


 





 

 
 
 
 
 

 

 
 


















 

 

 
 
 
 


 

 
 
 
 
 

 
 
 


 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Home		Shift + Smart
	YouTube		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Mute		Mute
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Q.View		Options
	Guide		Guide
	Menu		Menu
	Return		Back
	Exit		Exit
	3D		3D
	CH.List		List
	MTS/SAP		Dual
	CC		Subt
	Q.Menu		D. Menu
	OK		Ok
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Sleep		Sleep
	S.Mode	+	Shift + Dual
	USB		Media
	P.Mode	+	Shift + Format
	H.Lock	+	Shift + Stop
	P.Size		Format
	Red		Red
	Play		Play
	Pause		Pause
	Green		Green
	<<		<<
	Yellow		Yellow
	>>		>>
	Blue		Blue
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

