 



 

 

 

 

 

 
 
 

 

 







 

 



 

 

 

 



 

 

 

 







 

 

 

 

 





Originalfernbedienung    Ersatzfernbedienung

	D.Menu		D.Menu / Top
	Power		Power
	Open / Close		Eject / Surround
	Info		Info / Angle
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Audio I/II		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	CH. List		Smart / List
	Screen		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung    Ersatzfernbedienung

	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Q.View		Shift + Menu /
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/-
	Vol +		Vol+
	P+		CH+ / Page+
	Vol -		Vol-
	P -		CH- / Page-
	Menu		Menu / Home
	FAV		Fav / Marker / PC
	Up		Up
	Left		Left
	OK		OK





**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Record		Rec / Rec Mode
	[X] / Repeat		Back / Return
	▶ / Index		Play / Slow
	▬▬ Pause		Pause / Step / Freeze
	■ Stop		Stop / Hold
	Red / ◀◀ / REV		Shift + Red / Netflix / Search
	Red / ◀◀ / REV		Red / Netflix / Search
	Green / ▶▶ / FWD		Shift + Green / APP / Repeat
	Green / ▶▶ / FWD		Green / APP / Repeat
	Yellow / ◀◀◀ / Prev		Shift + Yellow / YouTube / Repeat
	Yellow / ◀◀◀ / Prev		Yellow / YouTube / Repeat
	Blue / ▶▶▶ / Next		Blue / Prime Video / Random
	Blue / ▶▶▶ / Next		Shift + Blue / Prime
	[≡] / Setup		Setup / OPT /

**Originalfernbedienung    Ersatzfernbedienung**

	[≡] / Setup		Shift + Setup / OPT / Tools
	[ /≡ ] / Title		Shift + Sound / Title
	[...] / Search		Text / Goto
	[...] / Search		Shift + Text /
	[ ] / 10+		Shift + 9
	[ ] / 10+		Shift + 0
	[ ? ] / Program		Shift + Guide / EPG / -/-
	[ ◆ ] / A-B		Shift + Fav / Marker / PC
	⊖ / Angle / Rec. List		Shift + TV/Radio / Program
	⊖ / Angle / Rec. List		Shift + Sleep / Timer
	D.Call		Shift + D.Menu / Top Menu

