





































Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Mute / Dimmer
	 Green / APP / Repeat
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/-
	 Vol-
	 Vol+
	 Down

Originalfernbedienung	Ersatzfernbedienung
	 Up
	 Left
	 Right
	 >>  / Preset+
	 << / Tune-
	 Text / Goto
	 Zoom / Size
	 >> / Tune+
	 Rec / Rec Mode
	 AV / Input / RDS
	 Picture / Format
	 Pause / Step / Freeze
	 Play / Slow
	 Stop / Hold

