









 

 

 

 

 



 



















 
 
 








 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	You Tube		Shift + Yellow / YouTube /
	Guide		Guide / EPG / -/-
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	prime video		Shift + Blue / Prime
	Rakuten Tv		TV/Radio /
	twitch		Picture / Format





Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

	*1	 <b>SETUP</b>	Setup / OPT /		
	Red	 <b>NETFLIX</b>	Red / Netflix / Search		
	Green	 <b>APP</b>	Green / APP / Repeat		
	Yellow	 <b>YouTube</b>	Yellow / YouTube / Repeat		
	Blue	 <b>Prime Video</b>	Blue / Prime Video / Random		
	<<	 <b>TUNE-</b>	<< / Tune-		
	Pause	 <b>STEP-FREEZE</b>	Pause / Step / Freeze		
	>>	 <b>TUNE+</b>	>> / Tune+		
	Rec	 <b>REC MODE</b>	Rec / Rec Mode		
	Play	 <b>SLOW</b>	Play / Slow		
	Stop	 <b>HOLD</b>	Stop / Hold		

