





































Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	TV/Radio		TV/Radio /
	Power		Power
	NTSC/PAL		Picture / Format
	Pause		Pause / Step / Freeze
	Audio		Audio / Lang I/II
	Last		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	Sat		Shift + 0
	Sat		AV / Input / RDS
	Menu		Menu / Home
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Page-		Shift + CH- / Page-
	Page-		I<< / Preset-
	Page+		>>I / Preset+



