 



 











 







 





 



 

 

 

 



 

 

 

 

 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡]/Text		Text / Goto
	I-II		Audio / Lang I/II
	[<>]/[+]		Shift + Picture / Format
	AV/[?]		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[...]		Subtitle / EQ
	[1 2] Split Window		Display / Media
	Cancel		Exit / Cancel / Clear
	Option		Setup / OPT /
	Tv Menu		Menu / Home
	Digital Menu		D.Menu / Top
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Down		Down
	A/D		Shift + Audio / Lang I/II
	EPG		Guide / EPG / -/-
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

8	8	8	8
9	9	9	9
[i+]	[i+]	INFO	Info / Angle
0	0	0	0
BACK P-P	P<P/Back	RETURN BACK	Back / Return
ACTIVE CTRL [-O-]/Active Ctrl	[-O-]/Active Ctrl	LIST SMART	Smart / List
TV/RADIO DV3	DV3/Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
Sound Smart	Sound Smart	TITLE SOUND	Sound / Title
Picture Smart	Picture Smart	FORMAT PICTURE	Picture / Format

Originalfernbedienung Ersatzfernbedienung

