



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	I<<		I<< / Preset-
	Green/[ ]		Green / APP / Repeat
	Stop		Stop / Hold
	Yellow		Yellow / YouTube / Repeat
	Play/[ ]		Play / Slow
	Blue/[ ]		Blue / Prime Video / Random
	>>I		>>I / Preset+
	AV/[ ]		AV / Input / RDS
	I-II/[ ]		Audio / Lang I/II
	[<>]/[+]		Picture / Format
	[-S-]		Zoom / Size
	Menu		Menu / Home
	[≡]		Text / Goto
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Smart		Sound / Title
	P-		CH- / Page-
	Smart [ ]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung    Ersatzfernbedienung

6	6	<b>TUNER</b> 6	6
7	7	<b>AUX - HDD</b> 7	7
8	8	<b>USB</b> 8	8
9	9	<b>BLUETOOTH</b> 9	9
[i+]	[i+]	<b>ANGLE</b> INFO	Info / Angle
0	0	<b>HDMI - BAT</b> 0	0
P/P	P<P	<b>PC FAV MARKER</b> FAV MARKER	Fav / Marker / PC

Originalfernbedienung    Ersatzfernbedienung




 



 

 










**Originalfernbedienung    Ersatzfernbedienung**

		Eject / Surround
		Subtitle / EQ
		Power
		Rec / Rec Mode
		I<< / Preset-
		Red / Netflix / Search
		Green / APP / Repeat
		Stop / Hold
		Play / Slow
		Yellow / YouTube / Repeat
		>>I / Preset+
		AV / Input / RDS
		Audio / Lang I/II
		Zoom / Size
		Picture / Format
		Menu / Home
		Pause / Step / Freeze

 



 

 

 

 

 

 

**Originalfernbedienung    Ersatzfernbedienung**

	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart [ ]		Smart / List
	1		1
	2		2
	3		3
	4		4





## Originalfernbedienung Ersatzfernbedienung




 


 

 
 

 

 



 



 




	5		5
	6		6
	7		7
	8		8
	9		9
	[+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

## Originalfernbedienung Ersatzfernbedienung



 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	-0-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	[<>]/[+]		Zoom / Size
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart [ ]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

