


 

 

 












 
 
 

 




 








 

 
 
 
 

 

 





 
 

 



 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	OK/List		Ok
	Guide		Guide
	Media		Media
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Up		Up
	Exit		Exit
	Last		Back
	Info		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Stop		Stop
	Pause		Pause







