


 




Originalfernbedienung    Ersatzfernbedienung

|                                                                                     |                  |                                                                                     |                       |
|-------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------|-----------------------|
|    | Power            |    | Power                 |
|    | Mute             |    | Mute / Dimmer         |
|    | Play             |    | Play / Slow           |
|    | Pause            |    | Pause / Step / Freeze |
|    | Stop             |    | Stop / Hold           |
|    | Rec              |    | Rec / Rec Mode        |
|    | <<               |    | << / Tune-            |
|    | >>               |    | >> / Tune+            |
|    | Lang             |    | Audio / Lang I/II     |
|    | Source (Games)   |    | Eject / Surround      |
|    | Movie-Music-Phot |    | Picture / Format      |
|   | [≡]..            |   | Zoom / Size           |
|  | */O              |  | Sleep / Timer         |
|  | TV               |  | TV/Radio /            |
|  | Q.Menu           |  | D.Menu / Top          |
|  | [-O-]            |  | Setup / OPT /         |
|  | [≡]/Text         |  | Text / Goto           |

Originalfernbedienung    Ersatzfernbedienung

|                                                                                       |                |                                                                                       |                       |
|---------------------------------------------------------------------------------------|----------------|---------------------------------------------------------------------------------------|-----------------------|
|    | Menu           |    | Menu / Home           |
|    | Up             |    | Up                    |
|    | i              |    | Info / Angle          |
|    | Left           |    | Left                  |
|    | OK             |    | OK                    |
|    | Right          |    | Right                 |
|    | Exit           |    | Exit / Cancel / Clear |
|    | Down           |    | Down                  |
|    | Back           |    | Back / Return         |
|    | Vol+           |    | Vol+                  |
|    | World (Violet) |    | Smart / List          |
|   | PR+            |   | CH+ / Page+           |
|  | Vol-           |  | Vol-                  |
|  | */Q            |  | Display / Media       |
|  | PR-            |  | CH- / Page-           |
|  | 1              |  | 1                     |
|  | 2              |  | 2                     |



