 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	I<<		I<<
	Open/Close		Eject
	<<		<<
	>>		>>
	>>		>>
	Play/Pause		Play
	TV/TXT/Langua		Text
	Cancel/Zoom		Shift + Eject
	Reveal/Subtitle		Subt
	Stop		Stop
	Hold/Menu		D. Menu
	Size/Angle		Format
	Subpage/Title		Options
	Index/Goto		Media
	Red/Program		Red
	Green/Slow		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	CH+		Ch +
	CH-		Ch -
	Tv-Menu		Menu
	TV/AV		AV
	Vol+		Vol +
	Vol-		Vol -
	DTV		Smart
	DVD Setup		Shift + Menu
	Exit		Exit
	Display		Shift + Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	+	Shift + Guide
	Recall	+	Pre Ch
	Picture	+ +	Shift + Format
	Sound	+ +	Shift + Dual
	Nicam/A2	+	Dual
	Mute		Mute
	Sleep	+	Sleep

Originalfernbedienung Ersatzfernbedienung

	Info	+	Info
	Subtitle	+ +	Shift + Subt
	Channel List	+	List
	EPG	+	Guide
	Tv/Radio	+	TV/R
	FAV	+ +	Shift + Pre Ch
	Aspect	+	3D

