




 

 


 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/SAT		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Smart
	FAV	 + 	Shift + Pre Ch
	Menu		Menu
	EPG		Guide


Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Red		Red
	TTX		Text
	Green		Green
	SUB.T		Subt
	Yellow		Yellow
	Zoom		Eject





Originalfernbedienung Ersatzfernbedienung

 MP	Blue	 D	Blue
 MP	MP	 3D	3D
 TV/RADIO	Tv/Radio	 TV/R	TV/R
 AUDIO	Audio	 DUAL	Dual
 PAUSE	Pause		Pause
 REC	Rec		Rec
 INFO	Info		Info
 P/N	P/N	 SHIFT +  MEDIA	Shift + Media
 POS	POS		Media
 T/S	T/S		Options
	<<		<<
	>>		>>
 OK	Play		Play
 OK	Stop		Stop

Originalfernbedienung Ersatzfernbedienung