









































Originalfernbedienung Ersatzfernbedienung

|   |                 |   |                       |
|---|-----------------|---|-----------------------|
|    | Power           |    | Power                 |
|    | 1               |    | 1                     |
|    | 2               |    | 2                     |
|    | 3               |    | 3                     |
|    | 4               |    | 4                     |
|    | 5               |    | 5                     |
|    | 6               |    | 6                     |
|    | 7               |    | 7                     |
|    | 8               |    | 8                     |
|    | 9               |    | 9                     |
|    | 0 / □           |    | 0                     |
|  | 0 / □           |  | Display / Media       |
|  | Exit / TV/Radio |  | TV/Radio /            |
|  | Exit / TV/Radio |  | Exit / Cancel / Clear |
|  | Mute            |  | Mute / Dimmer         |
|  | Vol-            |  | Vol-                  |
|  | Vol+            |  | Vol+                  |

Originalfernbedienung Ersatzfernbedienung

|   |                |   |                   |
|---|----------------|---|-------------------|
|    | i              |    | Info / Angle      |
|    | Back           |    | Back / Return     |
|    | ●              |    | Rec / Rec Mode    |
|    | Menu           |    | Menu / Home       |
|    | Guide          |    | Guide / EPG / -/- |
|    | P+             |    | CH+ / Page+       |
|    | P-             |    | CH- / Page-       |
|    | ↑              |    | Shift + CH+ /     |
|    | ↑              |    | >>I / Preset+     |
|    | ↓              |    | Shift + CH- /     |
|    | ↓              |    | I<< / Preset-     |
|  | Up             |  | Up                |
|  | Left           |  | Left              |
|  | OK             |  | OK                |
|  | Right          |  | Right             |
|  | Down           |  | Down              |
|  | Green / Option |  | Setup / OPT /     |





**Originalfernbedienung Ersatzfernbedienung**

|   |                |   |                             |
|---|----------------|---|-----------------------------|
|  | Red            |  | Red / Netflix / Search      |
|  | Yellow / Text  |  | Yellow / YouTube / Repeat   |
|  | Green / Option |  | Green / APP / Repeat        |
|  | Blue / Recall  |  | Fav / Marker / PC           |
|  | Yellow / Text  |  | Text / Goto                 |
|  | Blue / Recall  |  | Blue / Prime Video / Random |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |
|   |                |   |                             |

**Originalfernbedienung Ersatzfernbedienung**

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

