
 












Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Shift + Guide / EPG / -/-
	Recall		Back / Return
	Vol+		Vol+
	I/II/Audio		Audio / Lang I/II
	Auto		Smart / List







 













 

 





 
 


 

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK/Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Play/Pause / Size		Zoom / Size
	Play/Pause / Size		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Play/Pause / Size		Pause / Step / Freeze
	Stop/Hold		Stop / Hold
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	<</Index		<< / Tune-
	>>/Reveal		>> / Tune+
	I<</Subpage		I<< / Preset-
	>>I/FAV		>>I / Preset+
	>>I/FAV		Fav / Marker / PC
	Media		Shift + Display / Media
	Rec		Rec / Rec Mode
	EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

