









 



 

 









 



 

 

 

 





Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Back / Return
	 Menu / Home
	 CH- / Page-
	 CH+ / Page+
	 Subtitle / EQ
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 Vol-
	 Vol+
	 0
	 1
	 2
	 3
	 4

Originalfernbedienung	Ersatzfernbedienung
	 5
	 6
	 7
	 8
	 9

