

 

 






 

 

 

 



 

 

 

 




 


 







 

 

 

 
 
 

 


 

 




 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Cancel		Shift + Back
	Repeat		Shift + Text
	Play Mode		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	Disc 3		Yellow
	Disc 2		Green

Originalfernbedienung Ersatzfernbedienung

	Disc 1		Red
	FM Mode/Mute		Menu
	L Balance		Text
	Balance R		AV
	Tape Direction		Exit
	Tape Display		Back
	SEA Mode		Subt
	S.A.Bass		Options
	Surround Mode		Dual
	Rec Pause		Rec
	Fade Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up/PTY Search		Up
	Play		Play
	Down/RDS Display Mode		Down
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung







 








 




 

 



 






	Right/PTY Select+		Right
	>> >>		>>
	Left/PTY Select-		Left
	<</<<		<<

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	Play		Play
	Stop		Stop
	Fade Muting		Mute
	>> >>		>>

 


 
 

 


 
Originalfernbedienung Ersatzfernbedienung

	I<</<<		<<
	Rec Pause		Rec
	S.A. Bass		Options
	Surround Mode		Dual
	Up/PTY Search		Up
	Down/PTY Display Mode		Down
	Right/PTY Select+		Right
	Left/PTY Select-		Left
	Vol-		Vol -
	Vol+		Vol +
	FM Mode/Mute		Menu
	Tape Direction		Exit
	Tape Display		Back
	L Balance		Text
	Balance R		AV
	Play Mode		Format
	Repeat		Shift + Text





Originalfernbedienung Ersatzfernbedienung










 











 









 


	Cancel		Shift + Back
	SEA Mode		Subt
	Disc 1		Red
	Disc 2		Green
	Disc 3		Yellow

Originalfernbedienung Ersatzfernbedienung

 
 


 
 

 






 


 



 




 





 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	6		6
	5		5
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Fade Muting		Mute
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	Surround Mode		Dual
	S.A.Bass		Options
	SEA Mode		Subt
	Up/PTY Search		Up
	Down/RDS Display Mode		Down
	Right/PTY Select+		Right
	left/PTY Select-		Left
	Sleep		Sleep
	FM Mode/Mute		Menu
	Tape Direction		Exit
	Tape Display		Back
	L Balance		Text
	Balance R		AV
	Play Mode		Format
	Repeat		Shift + Text
	Cancel		Shift + Back
	Disc 1		Red





Originalfernbedienung Ersatzfernbedienung




 


 






 
 







 




 






DISC 2	Disc 2	B	Green
DISC 3	Disc 3	C	Yellow

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	Sleep		Sleep
	Fade Muting		Mute
	Play		Play
	Stop		Stop
	S.A. Bass		Options

 
 



 


Originalfernbedienung Ersatzfernbedienung

	Surround Mode		Dual
	Vol+		Vol +
	Vol-		Vol -
	Up/PTY Search		Up
	Down/RDS Display Mode		Down
	Right/PTY Select+		Right
	Left/PTY Select-		Left
	>> >>		>>
	<< <<		<<
	FM Mode/Mute		Menu
	Tape Direction		Exit
	Tape Display		Back
	L Balance		Text
	Balance R		AV
	Play Mode		Format
	Repeat		Shift + Text
	Cancel		Shift + Back





Originalfernbedienung Ersatzfernbedienung

	SEA Mode		Subt
	Disc 1		Red
	Disc 2		Green
	Disc 3		Yellow

Originalfernbedienung Ersatzfernbedienung

