 








 

 





 
 
 
 
 
 



 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power Audio		Power
	Power Tv		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide
	+10		Pre Ch
	Menu PL		Menu
	Top Menu/PG		Smart
	Set Up		Media

**Originalfernbedienung    Ersatzfernbedienung**

	Set		Options
	On Screen		Shift + Options
	Display		Info
	Up		Up
	Down		Down
	Enter		Ok
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Fade Muting		Mute
	Zoom		Eject
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Clock/Timer		Shift + AV
	Treble/Bass		Green

 
 

 




 









 
 
 

 
 
 
 

 
 

 





Originalfernbedienung Ersatzfernbedienung

	AHP Pro		Blue
	Repeat		Text
	Play DVD/CD		Play
	Stop		Stop
	Pause		Pause
	<</Slow-		<<
	>>/Slow+		>>
	I<<		I<<
	>>I		>>I
	FM/Play Mode		Shift + Play
	Sound Turbo II		Format
	Tape <>		AV
	FM/AM/AUX		TV/R
	Tv/Video		Shift + TV/R
	←		Back
	Tv CH+		Ch +
	Tv CH-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit
	Repeat A-B		Shift + Text
	Rev.Mode		3D
	#		Shift + Right
	b		Shift + Left
	I<< Group/Title/Skip		Shift + Ch -
	>>I Group/Title/Skip		Shift + Ch +
	Karaoke		D. Menu
	Echo		Shift + Menu
	Dimmer		Shift + 1
	Return		Shift + Back
	Sleep		Sleep
	A.Standby		Shift + 3
	VFP		Shift + 4
	Scan Mode		Shift + 5
	3D Phonic		Shift + 7
	)		Shift + 8





Originalfernbedienung   Ersatzfernbedienung

DVD LEVEL 9	DVD Level	SHIFT + 9	Shift + 9
PAGE 10	Page	DISC NAV LIST	List
+ +	Tv Vol+	SHIFT + + VOL	Shift + Vol +
- -	Tv Vol-	SHIFT + - VOL	Shift + Vol -

Originalfernbedienung   Ersatzfernbedienung