



 

 

 
 

 
 
 
 

 





 
 



 

 

 



 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	RGB		List
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Mute		Mute
	In Stop		D. Menu
	OK		Ok
	Up		Up
	Down		Down
	Right/time Shift		Right
	Left/Time Shift		Left
	Menu		Menu
	Exit		Exit
	In Start		Eject
	ADJ		Options
	XStudio		Dual
	Text		Text
	Check-P		Shift + Left
	Check-S		Shift + Right
	PSM		Pre Ch

 
 
 
 
 

 





 





Originalfernbedienung Ersatzfernbedienung

	PIP		3D
	CAP		Info
	MPX		Sleep
	SSM		Subt
	ARC		Format
	Red/Info		Red
	Green/Still		Green
	Yellow/HDMI-HO		Yellow
	Blue/USB-HOT		Blue
	Eye		Back
	B-Tooth		Smart
	Simplink / PIP PR-		Shift + Ch -
	PIP PR +		Shift + Ch +
	Tilt/PIP Input		Shift + AV
	Play		Play
	Pause/Swap		Pause
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	P-Only		Guide
	AV1		Shift + 1
	AV2		Shift + 2
	AV3		Shift + 3
	COMP1		Shift + 4
	COMP2		Shift + 5
	HDMI1		Shift + 6
	HDMI2		Shift + 7
	HDMI3		Shift + 8
	HDMI4/DVI		Shift + 9

