



**Originalfernbedienung    Ersatzfernbedienung**

	Power Tv		Shift + Power
	Power		Power
	Review		Setup / OPT /
	Tv/VCR		TV/Radio /
	Tv/VCR Tv		Shift + TV/Radio / Program
	Audio		Audio / Lang I/II
	Mute Tv		Shift + Mute / Dimmer
	--:--		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	X		Exit / Cancel / Clear
	0		0
	Timer		Sleep / Timer
	Start Debut +		Green / APP / Repeat
	Start Debut -		Red / Netflix / Search
	Stop Fin +		Blue / Prime Video / Random
	Stop Fin -		Yellow / YouTube / Repeat
	Date+		Vol+
	Date-		Vol-
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Prog		D.Menu / Top
	Timer/?		Shift + Sleep / Timer
	I/II		Display / Media
	30 Sec/>>>		Back / Return
<< button"/>	<<		<< / Tune-
	Play		Play / Slow



