






 

 



 

 

 



 

 

 



 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	FL Display		Shift + Info
	DVD		Smart
	FM/AM		Shift + Smart
	AUX		AV
	TV Sound		Shift + Dual
	Surr Mode		Shift + Ch -
	Surr On/Off		Shift + Ch +
	Muting		Mute
	Channel+		Ch +
	Channel-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	TA / NEWS / INFO		Info
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	<<		<<
	PTY-		Shift + I<<
	Memory		Pre Ch
	Stop		Stop
	FM Mode		Media
	Pause		Pause
	>>		>>
	PTY+		Shift + >>I
	Top Menu		D. Menu
	Menu		Menu
	PTY Search		TV/R
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down





**Originalfernbedienung    Ersatzfernbedienung**

	On Screen	 + 	Shift + Options
	RDS Display		Options
	Audio		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide
	+10	 + 	Shift + Guide
	Choice		Yellow




 

 

**Originalfernbedienung    Ersatzfernbedienung**

	Group / Title		Format
	Cancel		Exit
	Return		Back
	Repeat		Text
	Repeat A-B	 + 	Shift + Play
	Zoom	 + 	Shift + Eject
	VFP		3D
	Sleep		Sleep
	Effect		List
	Bass+	 + 	Shift + Up
	Bass-	 + 	Shift + Down
	Treble+	 + 	Shift + Right
	Treble-	 + 	Shift + Left
	Test		Red
	S.WFR+	 + 	Shift + 8
	S.WFR-	 + 	Shift + 0
	Center+	 + 	Shift + 2





Originalfernbedienung    Ersatzfernbedienung

	Center-	 + 	Shift + 5
	Surr-L+	 + 	Shift + 1
	Surr-L-	 + 	Shift + 4
	Surr-R+	 + 	Shift + 3
	Surr-R-	 + 	Shift + 6

Originalfernbedienung    Ersatzfernbedienung