










 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red / Eject		Red
	Red / Eject		Eject
	Green / Title		Green
	Yellow / DVD		Yellow
	Yellow / DVD		Options
	Blue / A-B		Blue
	<</[≡o]		<<
	>>/[≡?]		>>
	l<</[≡+]		l<<
	>>l/[≡..]		>>l
	Play		Play
	Pause		Pause
	Stop		Stop
	Angle / [≡i]		Smart
	Return / Text		Text

Originalfernbedienung Ersatzfernbedienung

	Return / Text		Shift + Back
	Subtitle		Subt
	Display		Shift + Info
	Menu / Info		Info
	Menu / Info		D. Menu
	Menu		Menu
	Up		Up
	Source		AV
	Left		Left
	OK		Ok
	Right		Right
	EPG		Guide
	Down		Down
	Exit		Exit
	Vol+		Vol +
	FAV		Pre Ch
	CH+		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
VOL -	Vol-	VOL -	Vol -				
REP	REP	REC MODE	Rec				
CH -	CH-	CH -	Ch -				
1	1	1	1				
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
AUDIO	Audio	SOUND DUAL	Dual				
0	0	0	0				
RECALL/GOTO	Recall / Goto	RETURN BACK	Back				

