














 














 









 





 

 




 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Display		Display / Media
	Play/Pause iPad		Play / Slow
	Play/Pause iPod		Pause / Step / Freeze
	Tuner		6
	PC		Fav / Marker / PC
	Audio In		Audio / Lang I/II
	Menu		Menu / Home
	Cancel		Exit / Cancel / Clear
	Up		Up
	Down		Down
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Set		OK
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+

**Originalfernbedienung    Ersatzfernbedienung**

	Program		TV/Radio /
	Random		Blue / Prime Video / Random
	Repeat/Tuner		Text / Goto
	Clock/Timer		Shift + Sleep / Timer
	APS		Zoom / Size
	Sleep		Sleep / Timer
	Muting		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Sound Turbo		Shift + TV/Radio / Program
	HBS		D.Menu / Top
	Sound Mode		Sound / Title
	Surround		Eject / Surround
	Resume		Picture / Format
	Dimmer		Shift + Mute / Dimmer

