






























 





**Originalfernbedienung    Ersatzfernbedienung**



















	Power		Power
	Review		Setup / OPT /
	Tv/VCR		TV/Radio /
	Audio		Audio / Lang I/II
	---		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	X		Exit / Cancel / Clear
	0		0
	Timer		Sleep / Timer

**Originalfernbedienung    Ersatzfernbedienung**

	Start Debut +		Green / APP / Repeat
	Stop Fin +		Blue / Prime Video / Random
	Date+		Vol+
	PR+		CH+ / Page+
	Start Debut -		Red / Netflix / Search
	Stop Fin -		Yellow / YouTube / Repeat
	Date-		Vol-
	PR-		CH- / Page-
	Prog		D.Menu / Top
	Timer/?		Shift + Sleep / Timer
	I///		Display / Media
	30 Sec >>		Back / Return
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold




**Originalfernbedienung Ersatzfernbedienung**




	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	OK		OK
	Up		Up
	Left/ <<-		Left
	Left/ <<-		<< / Preset-
	Right/>> +		>>  / Preset+
	Right/>> +		Right
	Down		Down

**Originalfernbedienung Ersatzfernbedienung**






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/VCR		AV / Input / RDS
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung