





 

 









 





 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|----------------------------|
|  | Power |  | Power |
|  | TV Standby |  | Shift + Power |
|  | TV Input |  | AV / Input / RDS |
|  | TV Vol + |  | Shift + Vol+ |
|  | TV Mute |  | Shift + Mute / Dimmer |
|  | TV CH + |  | Shift + CH+ / |
|  | TV Vol - |  | Shift + Vol- |
|  | TV CH - |  | Shift + CH- / |
|  | Audio |  | Audio / Lang I/II |
|  | SUB-T |  | Subtitle / EQ |
|  | TV / STB |  | Shift + TV/Radio / Program |
|  | TV / Radio |  | TV/Radio / |
|  | Mute |  | Mute / Dimmer |
|  | Text |  | Text / Goto |
|  | Sleep |  | Sleep / Timer |
|  | Voltar |  | Setup / OPT / |
|  | Guia TV |  | Shift + Guide / EPG / -/- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------------------------|
|  | VOD |  | Shift + Audio / Lang I/II |
|  | Vol + |  | Vol+ |
|  | Up |  | Up |
|  | CH + |  | CH+ / Page+ |
|  | Vol - |  | Vol- |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | CH - |  | CH- / Page- |
|  | Down |  | Down |
|  | Menu |  | Menu / Home |
|  | Lista Gravacoes |  | Smart / List |
|  | Lista Gravacoes |  | Shift + Smart / List |
|  | Exit |  | Exit / Cancel / Clear |
|  | Rec |  | Rec / Rec Mode |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |



 

 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------------|
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | Red / < |  +  | Shift + Red / Netflix / |
|  | Red / < |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow / i |  +  | Shift + Yellow / YouTube / |
|  | Yellow / i |  | Yellow / YouTube / Repeat |
|  | Blue / > |  +  | Shift + Blue / Prime |
|  | Blue / > |  | Blue / Prime Video / Random |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---|---|--------------------|
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | * |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | # |  | Fav / Marker / PC |

