







































Originalfernbedienung Ersatzfernbedienung

Lang./Rewind		<< / Tune-
Browse		Picture / Format
TV		TV/Radio /
TV/SAT		Smart / List
Epg	 + 	Shift + Guide / EPG / -/-
Lang./Rewind	 + 	Shift + Audio / Lang I/II
Yellow		Yellow / YouTube / Repeat
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/-
0/10		0

Originalfernbedienung Ersatzfernbedienung

FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
1. ?		1
Blue		Blue / Prime Video / Random
West		I<< / Preset-
Dev		>>I / Preset+
Freeze	 + 	Shift + Pause / Step /
Dec/Pause		Pause / Step / Freeze
East		Rec / Rec Mode
H/V Play		Play / Slow
LNB F.Forward		>> / Tune+
Menu Up		Up
Mute		Mute / Dimmer
Opt?		Setup / OPT /
App	 + 	Shift + Green / APP /
Info		Info / Angle



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Subt.List	 Subtitle / EQ	Audio	 Audio / Lang I/II
Sleep Timer	 Sleep / Timer	CH/Page-	 CH- / Page-
Video	 +  Shift + 4		
Text	 Text / Goto		
Zoom	 Zoom / Size		
Menu	 Menu / Home		
PWR On/Off	 Power		
Display	 Display / Media		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
CH/Page+	 CH+ / Page+		
Volume-	 Vol-		

