
















 













 

 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Pause		Pause
	Guide		Guide
	Info		Info
	Up / CH+		Up


 

 




**Originalfernbedienung    Ersatzfernbedienung**

	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Vol -
	Left / Vol-		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	Text		Text
	List		List
	Audio		Dual
	Subtitle		Subt
	P/N / Search		Shift + TV/R
	TV / Radio		TV/R
	DTV/VCR / Mode		AV





Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung