



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	I<<		I<< / Preset-
	Green/[]		Green / APP / Repeat
	Stop		Stop / Hold
	Yellow		Yellow / YouTube / Repeat
	Play/[]		Play / Slow
	Blue/[]		Blue / Prime Video / Random
	>>I		>>I / Preset+
	AV/[]		AV / Input / RDS
	I-II/[]		Audio / Lang I/II
	[<>]/[+]		Picture / Format
	[-S-]		Zoom / Size
	Menu		Menu / Home
	[≡]		Text / Goto
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Smart		Sound / Title
	P-		CH- / Page-
	Smart []		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

 
 

	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung



 





 






Originalfernbedienung Ersatzfernbedienung

		Eject / Surround
		Subtitle / EQ
		Power
		Rec / Rec Mode
		I<< / Preset-
		Red / Netflix / Search
		Green / APP / Repeat
		Stop / Hold
		Play / Slow
		Yellow / YouTube / Repeat
		>>I / Preset+
		AV / Input / RDS
		Audio / Lang I/II
		Zoom / Size
		Picture / Format
		Menu / Home
		Pause / Step / Freeze

 



 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart []		Smart / List
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung




 


 

 

 

 

 

 



 



 


 

 

	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	-0-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	[<>]/[+]		Zoom / Size
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart []		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

