







 











 

 



























Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	DVR		Smart
	R		Shift + TV/R
	TV		TV/R
	OO		Dual
	F		Back
	G		AV
	A/B		Options
	EPG		Guide
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Prog		Sleep
	Exit		Exit
	Stop		Stop
	Red / Rec		Red
	Red / Rec		Rec
	Green / <<		Green
	Green / <<		<<
	Green / <<		l<<
	Yellow / Play		Yellow
	Yellow / Play		Play
	Blue / >>		Blue
	Blue / >>		>>
	Blue / >>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	i		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

