


 





 

 

 

 

 

 

 

 

 

 

 

 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------------|
|  | Power |  | Power |
|  | Exit |  | Exit |
|  | Display |  | Shift + Info |
|  | TV/AV |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Recall |  | Pre Ch |
|  | Back |  | Back |
|  | -/-- |  | Shift + Guide |

Originalfernbedienung Ersatzfernbedienung












| | | | |
|---|--------|---|--------------|
|  | [≡?] |  | Smart |
|  | [≡⇅] |  | Eject |
|  | [/≡] |  | Shift + Text |
|  | [≡□] |  | Stop |
|  | [≡●] |  | Media |
|  | [≡i] |  | List |
|  | [≡] |  | Text |
|  | Menu 1 |  | D. Menu |
|  | Exit 1 |  | Shift + Exit |
|  | Info |  | Info |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Pause |  | Pause |
|  | PGUP |  | Shift + Ch + |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------------|
|  | PGDN |  | Shift + Ch - |
|  | TV / Audio |  | TV/R |
|  | Audio Setting |  | Options |
|  | Text 1 |  | Shift + Subt |
|  | EPG |  | Guide |
|  | Subtitle |  | Subt |
|  | 9 Picture |  | Shift + 9 |
|  | Sleep |  | Sleep |
|  | I/II |  | Dual |
|  | Mute |  | Mute |
|  | Red / Enter |  | Red |
|  | Green / P.Mode |  | Green |
|  | Green / P.Mode |  | Format |
|  | Yellow / ANA |  | Yellow |
|  | Blue / S.Mode |  | Blue |
|  | Blue / S.Mode |  | Shift + Dual |
|  | Up / P+ |  | Ch + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------|
|  | Up / P+ |  | Shift + Up |
|  | Down / P- |  | Ch - |
|  | Down / P- |  | Shift + Down |
|  | Right / V+ |  | Vol + |
|  | Right / V+ |  | Shift + Right |
|  | Left / V- |  | Vol - |
|  | Left / V- |  | Shift + Left |
|  | Menu |  | Menu |
|  | Menu |  | Shift + Ok |

