




 
 
 
 
 
 






 











 






 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	ARC		Shift + 1
	PSM		Shift + 2
	MTS		Shift + 3
	SSM		Shift + 4
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	PRE-PR		Pre Ch
	Still		Media
	Sleep		Sleep
	EPG		Guide
	Menu		Menu
	Exit		Exit
	DTV Menu		D. Menu
	Tv/DTV/Radio		TV/R
	PR Up		Ch +
	PR Down		Ch -
	UP		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -

 

 

 
 
 


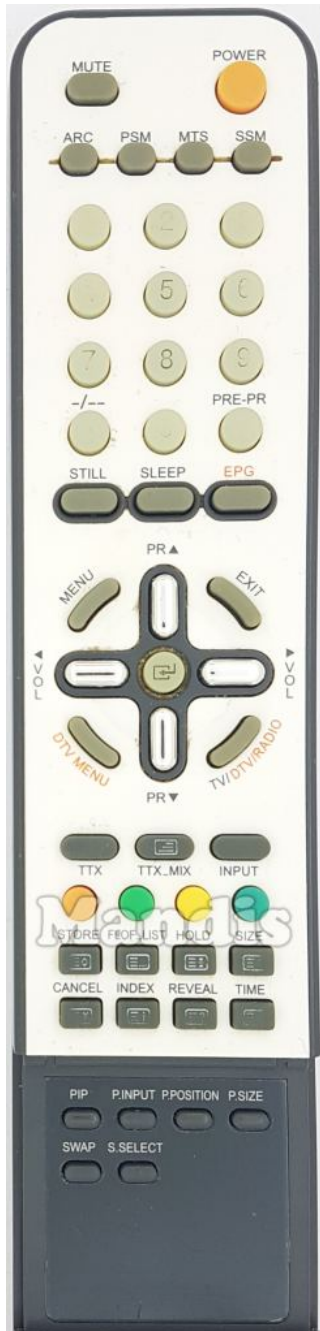


Originalfernbedienung Ersatzfernbedienung

	TTX		Text
	TTX.Mix		Shift + Text
	Input		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡◇]/Store		Options
	[≡..]/Flof_List		List
	[≡+]/Hold		Dual
	[≡◇]/Size		Format
	[≡x]/Cancel		Back
	[≡i]/Index		Info
	[≡?]/Reveal		3D
	[≡o]/Time		Subt
	PIP		Shift + 3D
	P.Input		Shift + AV

Originalfernbedienung Ersatzfernbedienung

	P.Position		Shift + Eject
	P.Size		Shift + Format
	Swap		Eject
	S.Select		Smart

