 




 



 

 






 

 
 

 

 



 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv	 + 	Shift + Power
	Input		AV / Input / RDS
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	Input Tv	 + 	Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	Vol+ Tv	 + 	Shift + Vol+
	4		4
	5		5
	6		6
	Vol- Tv	 + 	Shift + Vol-
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Rec List/Disc		D.Menu / Top
	0		0
	Q.Menu/Title	 + 	Shift + D.Menu / Top Menu
	Vol-		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause/Time Shift		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Up		Up
	Info/Menu		Info / Angle
	Left		Left
	Enter		OK



