


 





 

 

 

 






 



 



 

 





Originalfernbedienung Ersatzfernbedienung

	RATIO		Picture / Format
	POWER		Power
	INPUT		AV / Input / RDS
	AV MODE		Info / Angle
	ENERGY		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	LIST		Smart / List
	0		0
	Q.VIEW		Display / Media

Originalfernbedienung Ersatzfernbedienung

	VOL+		Vol+
	MUTE		Mute / Dimmer
	PR+/PAGE UP		CH+ / Page+
	VOL-		Vol-
	PR-/PAGE		CH- / Page-
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	MENU		Menu / Home
	DOWN		Down
	RETURN		Back / Return
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	STOP		Stop / Hold
	YELLOW		Yellow / YouTube / Repeat
	PLAY		Play / Slow



