 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Energy/Saving		Eject / Surround
	TV/Radio		TV/Radio /
	Guide		Guide / EPG / -/--
	Info		Info / Angle
	Ratio		Picture / Format
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	List		Smart / List
	Settings		Menu / Home
	Q.View		Display / Media
	Q.Menu		D.Menu / Top
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	FAV		Fav / Marker / PC
	AD		Audio / Lang I/II
	P+		CH+ / Page+



