





 

 





















 







Originalfernbedienung Ersatzfernbedienung

	Tv/AV		AV / Input / RDS
	Power		Power
	Multimedia		Display / Media
	PIP		Zoom / Size
	Zoom-		Shift + CH- /
	Zoom+		Shift + CH+ /
	Mute		Mute / Dimmer
	Text/*		Text / Goto
	Sleep		Sleep / Timer
	List		Smart / List
	I/II		Audio / Lang I/II
	Menu		Menu / Home
	ARC		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Left		Left
	Up		Up
	Right		Right













Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Down		Down
	Red/PIP PR-		Red / Netflix / Search
	Green/PIP PR+		Green / APP / Repeat
	Yellow/Swap		Yellow / YouTube / Repeat
	Blue/PIP Input		Blue / Prime Video / Random
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-
	SSM		Shift + Smart / List
	PSM		Shift + Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu / Home
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

 



 







 





















Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+



 




 






Originalfernbedienung Ersatzfernbedienung

	Power STB		Power
	Mute STB		Mute / Dimmer
	Tv/AV STB		AV / Input / RDS
	Menu STB		Menu / Home
	Up STB		Up
	Left STB		Left
	OK STB		OK
	Right STB		Right
	Down STB		Down
	Vol+ STB		Vol+
	PR+ STB		CH+ / Page+
	Vol- STB		Vol-
	PR- STB		CH- / Page-
	1 STB		1
	2 STB		2
	3 STB		3
	4 STB		4

 
 




 

 

 



 

 

 








 



Originalfernbedienung Ersatzfernbedienung

	5 STB		5
	6 STB		6
	7 STB		7
	8 STB		8
	9 STB		9
	0 STB		0
	Power Cable		Shift + Power
	Mute Cable		Shift + Mute / Dimmer
	Menu Cable		Shift + Menu /
	Up Cable		Shift + Up
	OK Cable		Shift + OK
	Down Cable		Shift + Down
	Vol+ Cable		Shift + Vol+
	PR+ Cable		Shift + CH+ /
	Vol- Cable		Shift + Vol-
	PR- Cable		Shift + CH- /
	1 Cable		Shift + 1





Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	Tv/AV VCR		AV / Input / RDS
	PR+ VCR		CH+ / Page+
	PR- VCR		CH- / Page-
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	Play VCR		Play / Slow
	Pause VCR		Pause / Step / Freeze
	Stop VCR		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Rec VCR		Rec / Rec Mode
	<< VCR		<< / Tune-
	>>		>> / Tune+
	Power Audio		Shift + Power
	Vol+ Audio		Vol+
	Vol- Audio		Vol-
	Mute Audio		Mute / Dimmer

