








 



 

 
 




 



 



 









 

 




 




 

 

 
 


 

 

 

 




Originalfernbedienung Ersatzfernbedienung

 




 
 

 


 















 






	Power		Power
	Source		AV
	Internet		Smart
	Sleep		Sleep
	Presets		Subt
	Multimedia		Media
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Lang		Dual
	[≡]		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Return		Shift + Back
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 V+	Vol+	 +	Vol +
 V-	Vol-	 VOL	Vol -
 Mute	Mute	 MUTE	Mute
 P+	P+	 +	Ch +
 P-	p-	 CH	Ch -
 Up	Up		Up
 Down	Down		Down
 Right	Right		Right
 Left	Left		Left
 OK	OK	 OK	Ok
 Wide	Wide	 PICTURE FORMAT	Format
 Folder [*]	Folder [*]	 ZOOM	Eject
 i	i	 DISPLAY INFO	Info
 */o	*/o	 SETTINGS OPT	Options
 */o.	*/o.	 ECO 3D	3D
 Text	Text	 REPEAT TEXT	Text
 []≡	[]≡	 GUIDE	Guide

