



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Tv/Radio		TV/Radio /
	Media	+	Shift + Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<</Size		Zoom / Size
	<</Size		<< / Tune-
	>>/Subpage		>> / Tune+
	Rec/D.Setup		Setup / OPT /
	Rec/D.Setup		Rec / Rec Mode
	Stop		Stop / Hold
	I<</FAV		Fav / Marker / PC
	I<</FAV		I<< / Preset-
	>>I/Index		>>I / Preset+
	Lang/Audio		Audio / Lang I/II
	Hold	+	Shift + Stop /

Hold








 
 
 
 

 


 



 
Originalfernbedienung Ersatzfernbedienung

	Text		Text / Goto
	Subtitle		Subtitle / EQ
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	+	Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+



 



 

 





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	CH-		CH- / Page-
	Red/Goto	 + 	Shift + Goto / Text /
	Red/Goto		Red / Netflix / Search
	Green/Angle		Info / Angle
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat	 + 	Shift + Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B	 + 	Shift + Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	Menu		Menu / Home
	Display		Display / Media
	Title/Exit		Exit / Cancel / Clear
	Title/Exit		Sound / Title
	Up		Up
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Source		AV / Input / RDS
	EPG/D.Menu		D.Menu / Top
	EPG/D.Menu		Guide / EPG / -/-

