




Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	DR+/Pop-Up-M		D.Menu / Top
	*/Zoom		Zoom / Size
	*/Zoom		Fav / Marker / PC
	Web		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	0/AV		AV / Input / RDS

Originalfernbedienung    Ersatzfernbedienung

	EPG		Guide / EPG / -/--
	Home		Shift + Menu /
	Home		Smart / List
	PIP		Picture / Format
	Text		Text / Goto
	Menu		Menu / Home
	Back		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	PR+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	PR-		CH- / Page-





Originalfernbedienung    Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random
	Blue/Marker	+	Shift + Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung    Ersatzfernbedienung