













 
 


 

 

 



 





 







 

 

 













 

 











Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Timer/□□		Sleep / Timer
	[]/T-C		Picture / Format
	Audio/Repeat		Shift + Green / APP /
	Audio/Repeat		Audio / Lang I/II
	[+]/Eye/SV		Display / Media
	→[]-/Disc Menu/SP/LP		D.Menu / Top
	Radio/Search/000		Shift + Red / Netflix /
	Radio/Search/000		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7








 

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	*/EPG		Guide / EPG / -/--
	0/AV		AV / Input / RDS
	0/AV		0
	#/PIP		Smart / List
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Text		Text / Goto
	Info		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Timer/□□		Sleep / Timer
	[]/T-C		Picture / Format
	[+]/Eye/SV		Display / Media
	→[]-/Disc Menu/SP/LP		D.Menu / Top
	Radio/Search/000		Shift + Red / Netflix /
	Radio/Search/000		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9















 



 

 

 



 





 

Originalfernbedienung Ersatzfernbedienung

	0/AV		AV / Input / RDS
	0/AV		0
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Text		Text / Goto
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random







 

 

 

 

 

 

 

 

















Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Timer/□□		Sleep / Timer
	[]/T-C		Picture / Format
	Audio/Repeat		Green / APP / Repeat
	Audio/Repeat		Audio / Lang I/II
	[+]/Eye/SV		Display / Media
	→[]←/Disc Menu/SP/LP		D.Menu / Top
	Radio/Search/000		Red / Netflix / Search
	Radio/Search/000		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0/AV		0
	0/AV		AV / Input / RDS
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	P-		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+



