


 
 

 



 

 


 
 
 

 

 

 



 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		Shift + Red
	SP		Shift + Yellow
	REC		Shift + Green
	AUDIO		Shift + Blue
	Timer/IN-Mode		AV
	>[ ]</5/7CH		Format
	Sound		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung




 
 


 
 

 
 

 
 

 

 
	9		9
	0/AV		0
	EPG/Bass		Guide
	Media/Surr		Media
	PIP/AUX		Pre Ch
	Text		Text
	Menu		Menu
	End		Exit
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left

















 




 
 
 


 

 

 
 



 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		Shift + Red
	REC		Shift + Green
	SP		Shift + Yellow
	AUDIO		Shift + Blue
	Timer/IN-Mode		AV
	>[ ]</5/7CH		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0

**Originalfernbedienung    Ersatzfernbedienung**



 



 

 



 


 
 
 

 


 
 
 
 
 
 
 


 


	EPG/Bass		Guide
	Media/Surr		Media
	PIP/AUX		Pre Ch
	Text		Text
	Menu		Menu
	End		Exit
	Info		Info
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red/Music		Red
	Green/Movie		Green
	Yellow/Show		Yellow







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		Shift + Red
	REC		Shift + Green
	SP		Shift + Yellow
	AUDIO		Shift + Blue
	Mute		Mute
	Timer/IN-Mode		AV
	>[ ]</5/7/CH (1)		Format
	Sound		Dual
	EPG/Bass (1)		Guide
	Media/Surr		Media
	Sound1		1
	Sound2		2
	Sound3		3
	Sound4		4
	>[ ]</5/7/CH (2)		Shift + Format
	EPG/Bass (2)		5



 


 
 

 

 




 
 
 

 

 

 

 

 

 




**Originalfernbedienung    Ersatzfernbedienung**

	EPG/Bass (3)		6
	PIP/AUX (1)		Pre Ch
	PIP/AUX (2)		Shift + 1
	PIP/AUX (3)		Shift + 2
	PIP/AUX (4)		Shift + 3
	PIP/AUX (5)		Shift + 4
	PIP/AUX (6)		Shift + 5
	PIP/AUX (7)		Shift + 6
	Text		Text
	Menu		Menu
	End		Exit
	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left










 

 
 




 
 
 


 

 

 
 

 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		Shift + Red
	REC		Shift + Green
	SP		Shift + Yellow
	AUDIO		Shift + Blue
	Timer/IN-Mode		AV
	>[ ]</5/7/CH		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0

**Originalfernbedienung    Ersatzfernbedienung**

	EPG/Bass		Guide
	Media/Surr		Media
	PIP/AUX		Pre Ch
	Text		Text
	Menu		Menu
	End		Exit
	Info		Info
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red/Music		Red
	Green/Movie		Green
	Yellow/Show		Yellow



