








 

 

 

 











 










Originalfernbedienung Ersatzfernbedienung



 
 







 
 


 

 


 

	Power		Power
	TV		TV/R
	VT		Smart
	BTX		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		Ch +
	P-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	Media		Media
	i		Info
	Guide		Guide
	Audio		Dual
	Brightness+		Up
	Brightness-		Down
	(+)Color+		Right
	(+)Color-		Left
	(O)		Subt
	[]		Text
	▲ M		Menu
	▼↔		Ok
	▲[≡>]		>>
	▼[--]		<<
	+ / +		3D




Originalfernbedienung Ersatzfernbedienung

	MEM/CM		Rec
	X Lock		Options
	-		Format
	[>≡]		AV
	[≡◆≡]		Back
	00:00		Exit
	? [≡/]		Eject
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

