









 













 





 

 


 



 


 





**Originalfernbedienung    Ersatzfernbedienung**

	Audio		Audio / Lang I/II
	[ ]		Picture / Format
	Power		Power
	PIP		Zoom / Size
	V=		D.Menu / Top
	[≡   ]		Guide / EPG / -/--
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0













 

 









**Originalfernbedienung    Ersatzfernbedienung**

	Pause/T		Pause / Step / Freeze
	M		Menu / Home
	E		Exit / Cancel / Clear
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





**Originalfernbedienung    Ersatzfernbedienung**

	Audio		Audio / Lang I/II
	[ ]		Picture / Format
	Power		Power
	SV/[ *]		Zoom / Size
	LP/V=		Setup / OPT /
	000/[≡I ]		Guide / EPG / -/--
	Timer/Mute		Sleep / Timer
	Timer/Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 








**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	Pause/T		Pause / Step / Freeze
	M		Menu / Home
	E		Exit / Cancel / Clear
	Rec/i		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow





**Originalfernbedienung    Ersatzfernbedienung**

	Audio		Audio / Lang I/II
	[ ]		Picture / Format
	Power		Power
	SV		Display / Media
	LP		Smart / List
	Timer		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	000		0
	M		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**

	E		Exit / Cancel / Clear
	Rec		Rec / Rec Mode
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow

