
 
 




 
 

 
 

 



 



 
 


 

 


 

 




 
 


 
 
 

 






 


| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|--|-----------------------|---|
| On/Off |  Power | OK Enter |  Ok |
| Mute |  Mute | Menu Right |  Right |
| Update |  List | Menu Off |  Exit |
| Reveal |  +  Shift + List | Menu Down |  Down |
| Txt Stop |  Stop | Back |  Back |
| Info |  Info | Volume+ |  Vol + |
| Subt.List |  Subt | Chan.Up |  Ch + |
| Sleep Timer |  Sleep | Menu audio |  Dual |
| Return TV |  TV/R | Volume- |  Vol - |
| Menu video |  D. Menu | Chan.Down |  Ch - |
| Text |  Text | 1 |  1 |
| Txt Expand |  Eject | 2 |  2 |
| TV/AV |  AV | 3 |  3 |
| Menu |  Menu | 4 |  4 |
| Menu Up |  Up | 5 |  5 |
| Display |  +  Shift + Info | 6 |  6 |
| Menu Left |  Left | 7 |  7 |



Originalfernbedienung Ersatzfernbedienung

| | | |
|---------------|---|----------------|
| 8 |  | 8 |
| 9 |  | 9 |
| Guide -/-- 1. |  | Guide |
| 0/10 |  | 0 |
| 2.Fav P/C 2. |  | Pre Ch |
| Red |  | Red |
| On/Tim |  | Options |
| Mix Scan |  | Play |
| Bright+ Mode |  | >>I |
| Green |  | Green |
| Rotate Text |  | >> |
| Audio+ |  | 3D |
| Disp |  | Format |
| Yellow |  | Yellow |
| Bright- Sys |  | I<< |
| Blue |  | Blue |
| Color+ P.Std |  | Shift + Format |

Originalfernbedienung Ersatzfernbedienung

| | | |
|----------------|---|----------------|
| Store Text |  | Shift + Text |
| Search |  | Shift + TV/R |
| Tone+ |  | Shift + Up |
| Store |  | Smart |
| Browse |  | Media |
| Tune- |  | Shift + Left |
| Color- S.Std |  | Shift + Dual |
| Aft/Caf |  | Shift + Ok |
| Tone- |  | Shift + Down |
| Tune+ |  | Shift + Right |
| Contrast+ |  | Shift + Ch + |
| Contrast- |  | Shift + Ch - |
| 3.* |  | Shift + Guide |
| Surround |  | Shift + Red |
| Nicam/Mono |  | Shift + Green |
| Level L |  | Shift + Yellow |
| Level R/Woofer |  | Shift + Blue |

